


# 7-Watt Night Light Candle Kit



Item #1042

## Kit includes:

- 4" Drip style socket cover tube.
- 6' Power cord with On/Off switch.
- Base bulb socket
- Plastic pipe bushing
- 7-Watt candle bulb with silicon tip

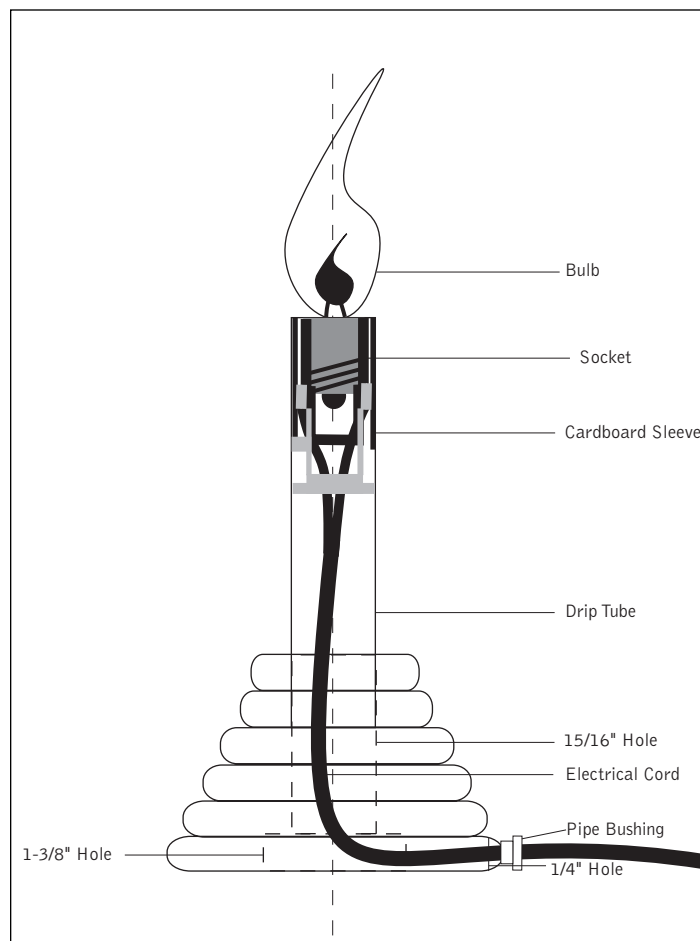

## Required accessories:

- 15/16" Drill bit
- 1-3/16" Forstner bit
- **#1612-1616** Colette chuck
- 1/4" Drill bit

## General turning instructions

- Prepare a wooden block 3-1/2" to 4" square x 2" high. Mark the center on the surface of the blank and using a compass, round line the outer diameter.
- Drill a 1-3/8" Forstner bit hole 3/8" deep in the bottom end of the blank. Follow with a 15/16" bit through the same hole.
- Measuring 1/4" from the bottom, drill a 1/4" hole through to the larger center hole.
- Use a band saw to cut around the perimeter of the round blank
- Mount the blank over the **#1612-1616** colette chuck on the lathe.
- Turn the wood and taper to the desired profile.
- Sand and finish the wood.

## Assembly (see above illustration)

- Insert the pipe bushing, narrow end first, into the hole at the base. Slide the cord, bare end first, toward the opening at the top.
- Pull the cord through the drip tube. Affix the bare wire to the socket screws and tighten. Cover with the provided cardboard sleeve.
- Tape around the socket sleeve to ensure a firm nesting inside the drip tube.
- Slide the socket inside the sleeve and drip tube.
- Glue the drip tube in the wood base inside the hole about 1/2" deep.
- Install the bulb and your project is ready to light up.

Sold by:  
The Wooden Post, Inc.  
(888) 595-7126

